


CONTROL PANEL

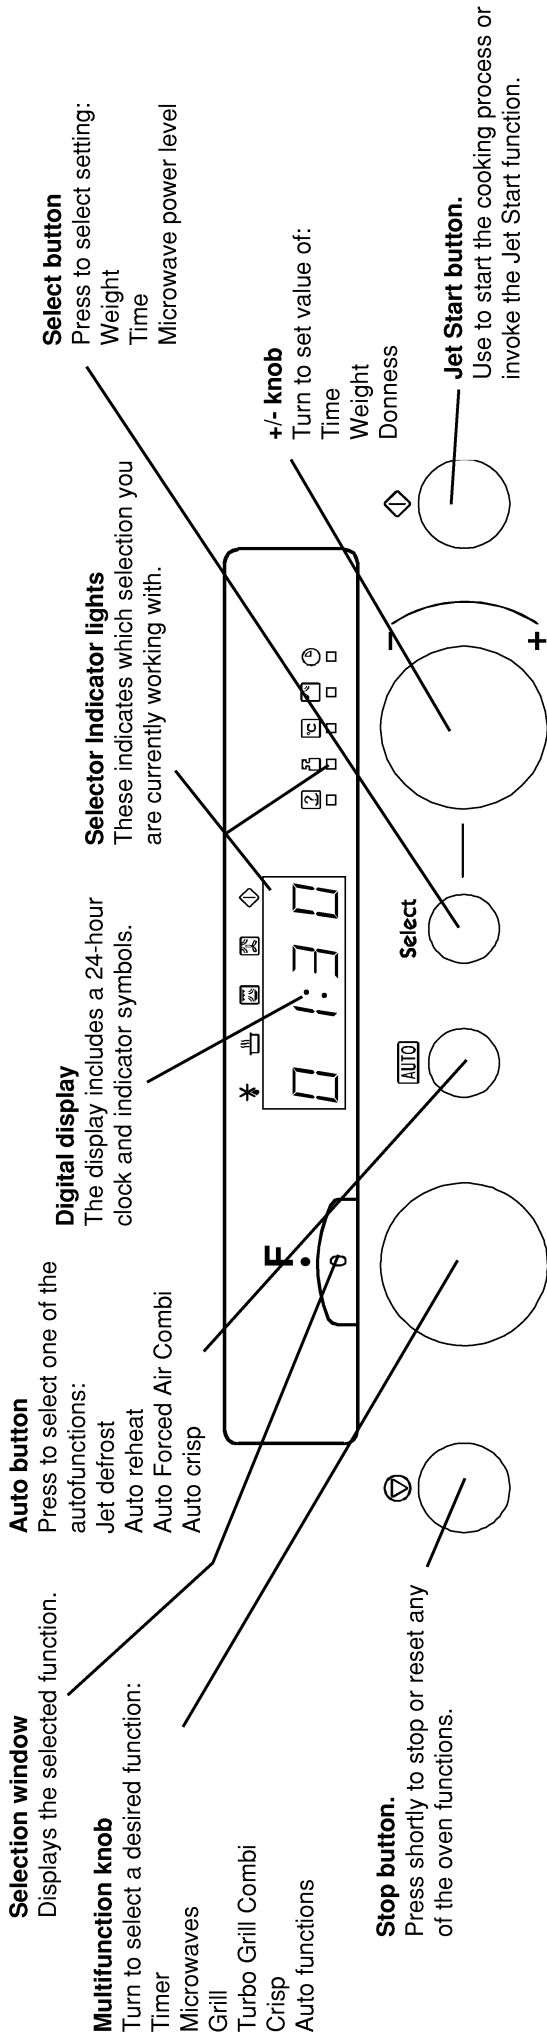

MICROWAVES ONLY

To be used for:

Level	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
JET / 900 W	
750 W	Cooking of vegetables, fish, meat etc.
650 W	Cooking dishes, not possible to stir.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews, melting butter.
160 W	Defrosting.
90 W	Softening butter, cheese and ice cream.
0 W	Setting the standing time.

MICROWAVES & GRILL / TURBO GRILL

To be used for:

Level	
90 - 160 W	Fish, fruit
160 - 350 W	Vegetables, gratins

FORCED AIR

To be used for:

Level	
90 - 160 W	Roasts, cakes
160 - 350 W	Lasagne, poultry

CHOOSING MICROWAVE POWER

MANUAL DEFROSTING

 
This function is used for defrosting food not included in the Jet defrost function.

Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting manually.

JET START FUNCTION

This function is used for quick reheating of food with a high water content such as; clear soups, coffe or tea.

Press to automatically start with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with ½ min. You may also alter the time by turning the Adjust knob to increase or decrease the time. This button also works as a normal start button after setting a function.



NOTE: Never operate the oven empty when using microwaves

AUTO

AUTO FUNCTIONS

QUICK GUIDE

1. Turn the multifunction knob to the Auto position.
2. Press the Auto button to select the desired auto function.
3. Turn the +/- knob to choose desired food class.
4. Press the Select button (default weight is displayed).
5. Turn the +/- knob to set the weight of the food.
6. Press the Start button.

Midway thru the process, the oven may STOP and prompt you to "TURN or STIR FOOD":

- Don't use the stop button!
- Just open the door and turn the food.
- Close, and restart with the Jet Start button.

Automatic but less perfect results:

If you do not turn the food when the oven prompts you to do so, the oven will AUTOMATICALLY RESTART after 1 minute. The oven then completes the process. The time will be longer in this case and the result will be less perfect, than it would have been if you had turned the food when prompted to do so.

AUTO

JET DEFROST

Use this function for defrosting ONLY. Jet Defrost can only be used for very fast defrosting of frozen food belonging to the categories listed here. Use manual defrost for other food or weights not listed.



1 MEAT
(100 g - 2 Kg)



2 POULTRY
(100 g - 3 Kg)



3 FISH
(100 g - 2 Kg)



4 VEGETABLES
(100 g - 2 Kg)



5 BREAD
(100 g - 2 Kg)

PLEASE NOTICE

To achieve perfect results it is NECESSARY to:

- Input, with the max. possible precision, the WEIGHT of the food selected.
- Turn the food when the oven prompts you to do so.

AUTO

AUTO REHEAT

Use this function when reheating readymade food or milk. Auto Reheat can be used for food belonging to the categories listed here.



1 DINNER PLATE
(250 g - 600 g)



2 SOUP
(200 g - 800 g)



3 FROZEN PORTION
(250 g - 600 g)



4 MILK
(100 g - 500 g)



5 CASSEROLE
(200 g - 800 g)



PLEASE NOTICE

During the heating process the oven may stop and prompt you to "STIR" food.

AUTO

AUTO CRISP

Use this function to quickly reheat your food from frozen to serving temperature.

PLEASE NOTICE

Auto Crisp is used only for frozen ready made food and fish fingers.



1 FRENCH FRIES
(200 g - 600 g)



2 PIZZA, thin crust
(200 g - 500 g)



3 PAN PIZZA
(300 g - 800 g)



4 CHICKEN WINGS
(200 g - 600 g)



5 FISH FINGERS
(200 g - 600 g)

AUTO

AUTO FORCED AIR COMBI

Use this function for cooking from raw or frozen. Auto Cook can only be used for food belonging to the categories listed here. Use "Forced air or Forced air & microwaves" for other food or weights not listed.

NOTICE

After the PRE-HEATING process the oven will stop and prompt you to "ADD" food.



1 CHICKEN
(800 g - 1½ Kg)



2 FROZEN LASAGNE
(400 g - 1 Kg)



3 COOKIES



4 CANNED BREAD DOUGH



5 FROZEN ROLLS
PLEASE

GRILL

Use this function when cooking:

- Cheese toast & Hot sandwich
- Sausages
- Grill spit
- Pommes Duchesse
- Gratinated fruit

TURBO GRILL COMBI

Use this function when cooking:

- Potato gratin
- Fish gratin
- Chicken pieces
- Lasagne
- Stuffed vegetables

TECHNICAL SPECIFICATION

Supply voltage	230 V/50 Hz
Rated Power Input	2800 W
Fuse	16 A (UK 13 A)
MW output power	900 W
Grill	1600 W
Forced Air	1200 W
H x W x D	
Outer dimensions:	455 x 595 x 560
Oven compartment:	210 x 450 x 420



4619 694 45332

NOTE: Never operate the oven empty when using microwaves